5. Troubleshooting

5-1 No Video (Raster On, No Sound)

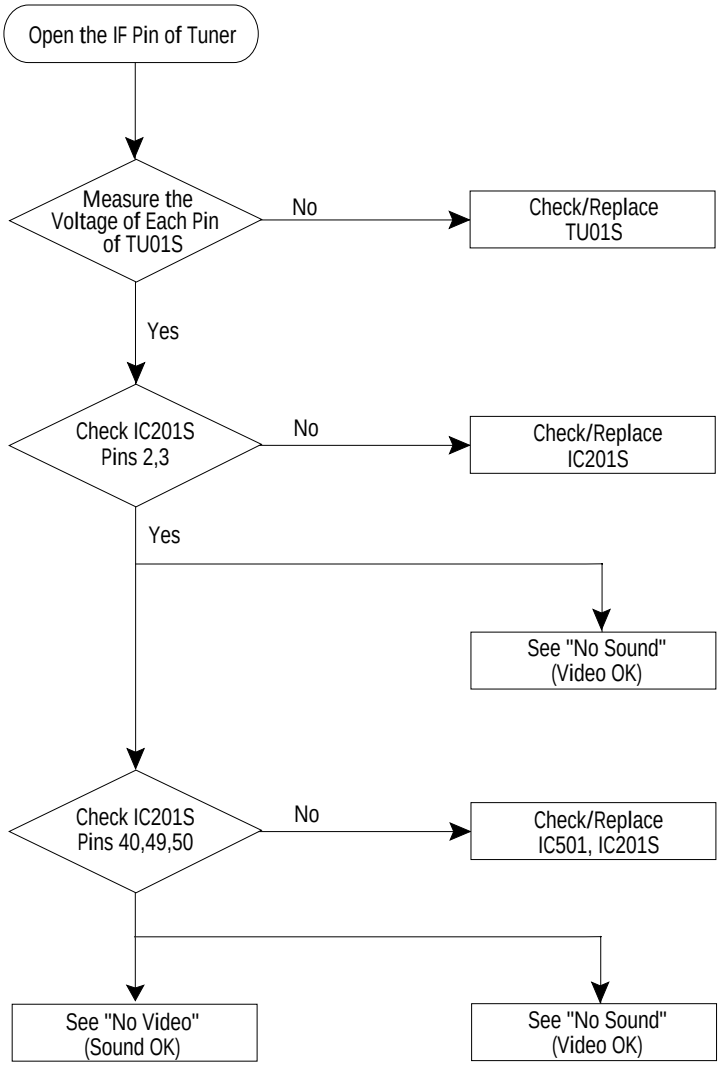

5-2 No Power

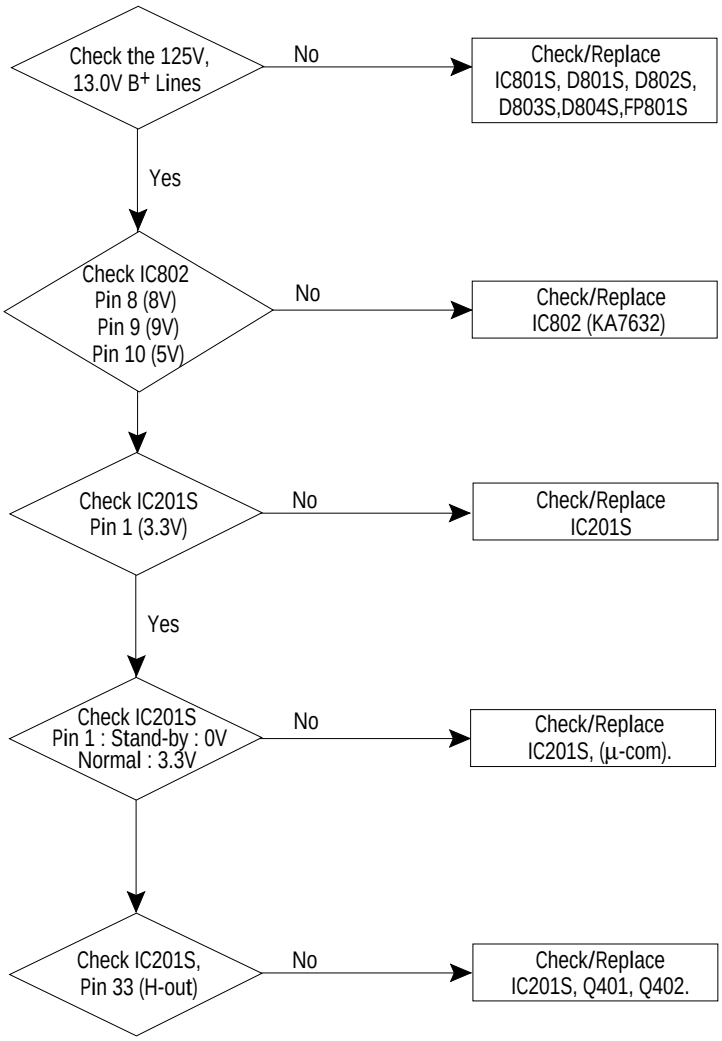
Check the 125V, 13.0V B+ Lines
No
Check/Replace IC801S, D801S, D802S, D803S,D804S,FP801S
Yes
Check IC802 Pin 8 (8V) Pin 9 (9V) Pin 10 (5V)
No
Check/Replace IC802 (KA7632)
Check IC201S Pin 1 (3.3V)
No
Check/Replace IC201S
Yes
Check IC201S Pin 1 : Stand-by : 0V Normal : 3.3V
No
Check/Replace IC201S, (μ-com).
Check IC201S, Pin 33 (H-out)
No
Check/Replace IC201S, Q401, Q402.

5-3 No Video (Sound OK)

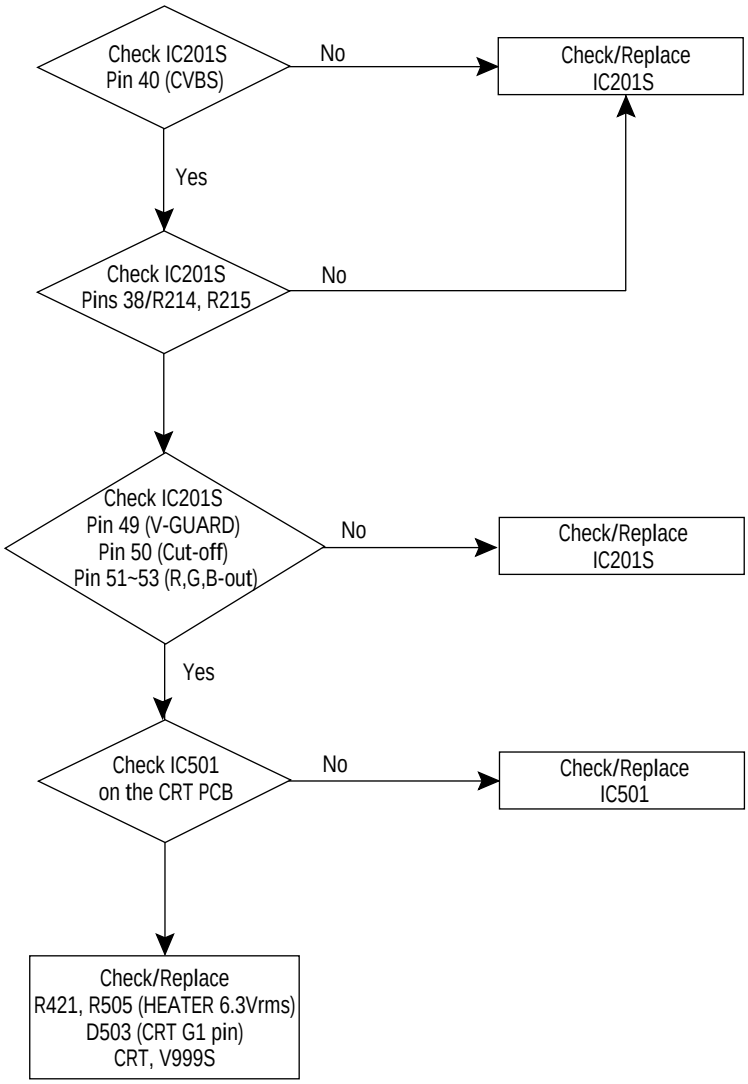

5-4 No Sound (Video OK)

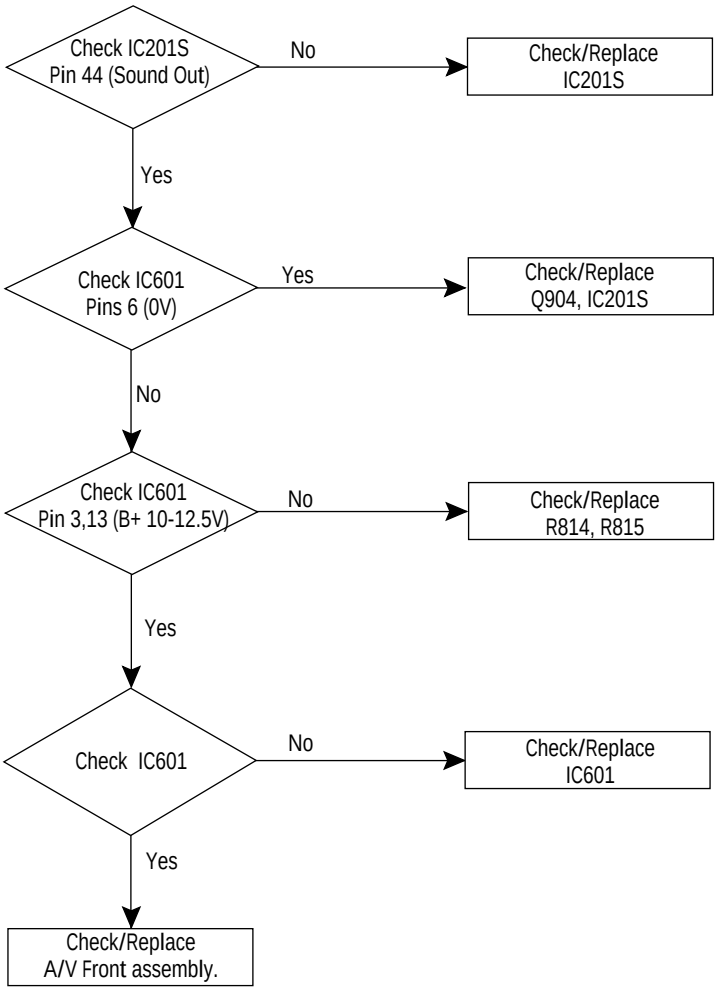
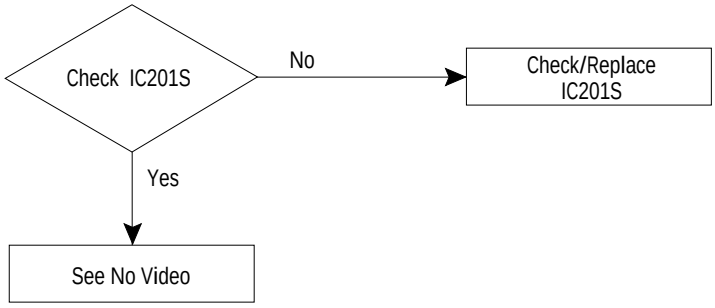
5-5 No TTX